

INSTALLATION


Connect the terminals of the BK92 to the battery as shown in the wiring diagram.

Steps to fix the BK92 to the vehicle:

- 1) Drill a $\varnothing 8,5$ mm hole into the supporting surface of the BK92.
- 2) Fix the BK92 with a M8 screw, a washer and a M8 nut.

Mount the BK92 in a dry area, away from water.

WIRING DIAGRAM

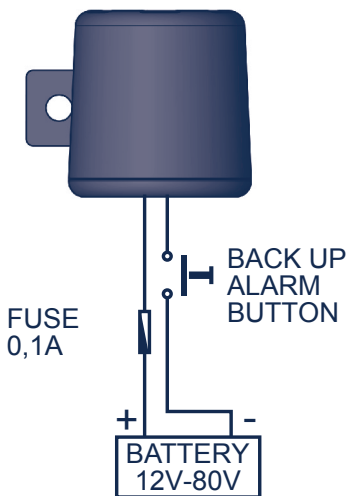

MOUNTING DIAGRAM

